


## Adjustment Instructions

---

### Relief Valve RV-PRV --- Instruction Manual pg 10

- 1) Relief Valve - The relief valve leaves the factory set to relieve at 100 PSI.
- 2) To change the setting to 75 through 250 PSI turn the set screw **LEVEL** with the number position indicated.
- 3) 6 MM Allen wrench is required to move set screw.

- Easy to adjust Pressure Relief Valve

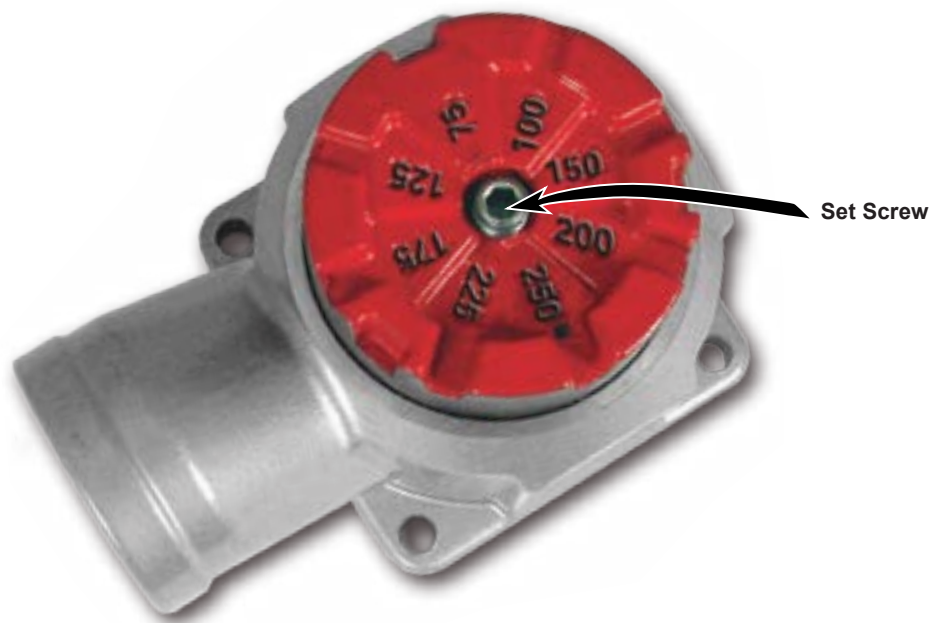

**RELIEF VALVE**